

Customer Service: (702) 361-4345, (800) 525-2655, customer.service@kalco.com

WARNING! - TO REDUCE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture, make sure you have enough qualified help.
- 2.Turn the power off to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

FRAME INSTALLATION:


Step 1. Screw Crossbar 2 to outlet box 1 with original outlet box screws. Make sure crossbar studs are pointing away from wall.

Step 2. Get fixture frame 3 a few inches close to wall and connect wires: Connect fixture ribbed wire to power supply black wire. Connect fixture smooth wire to power supply white wire. Connect fixture silver or copper bare wire to power supply green wire.

Step 3. Align back plate holes to crossbar studs 2 and fix it flat to wall, secure fixture with decorative nuts 4, then Install light bulbs.
NOTE: Use bulbs 40w max


Step 4. Install threaded rod 5 to bottom of fixture, then install parts 6, 7, 8 and 9 and 10.

Proceed to install crystal set as shown on page 2 and 3.

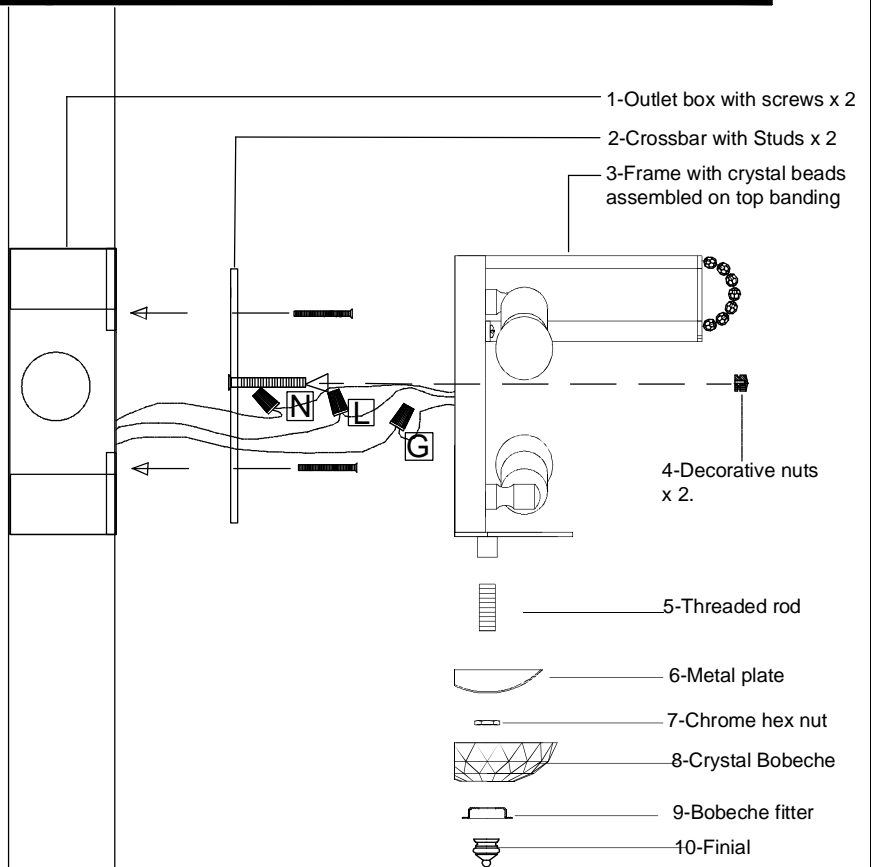

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

CRYSTAL TRIMMING INSTRUCTIONS:

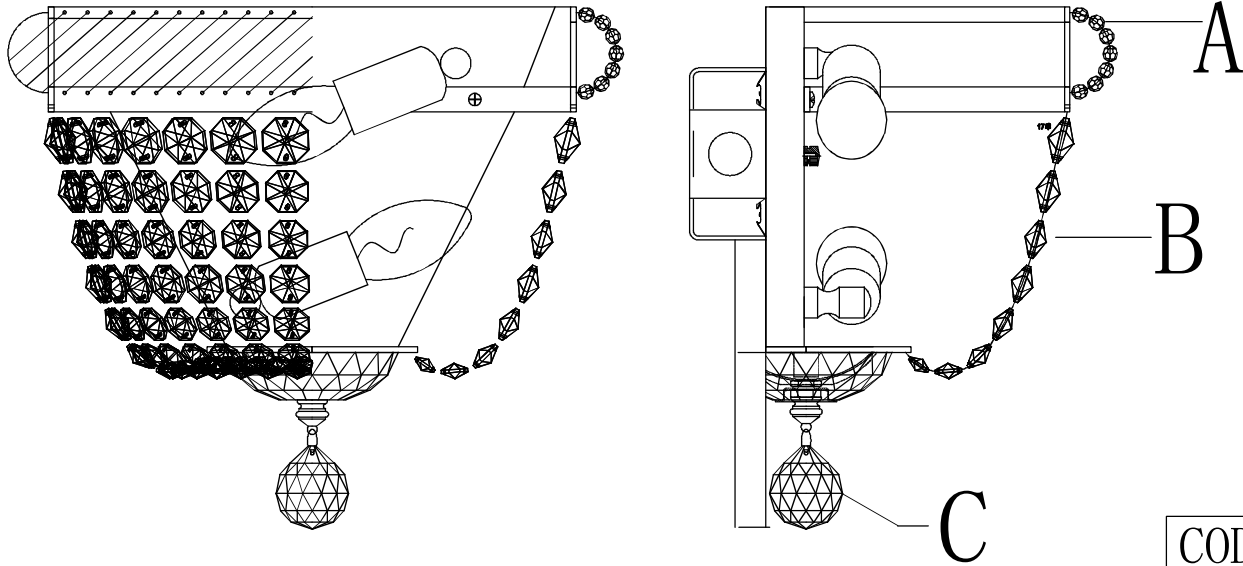

CODE	QTY
A	39
B	17
C	1

INSTRUCTIONS:

Step 1. Unwrap and lay down all crystal parts on a soft clean cloth. Organize and identify crystal parts, use cotton gloves for installation.

Step 2. Note: All crystals (A) comes factory assembled.

Step 3. Hung 17 crystal strands (B) to top ring

Step 4. Hung crystal sphere (C) to bottom of fixture.

